



SAFE RETURN 77 SERIES VALVES



PRODUCT CATALOG

Control Reliable CROSSMIRROR® Double Valves 77 Series

Product Overview

Safe Return Safety Function

This valve is constructed with precision, stainless steel spools as the main valve elements, and is designed to offer added safety to the operation of many pneumatically controlled machines such as small size pneumatic cylinder-operated presses, valve operators, and safety latches.

Solenoid Pilot Controlled	Pressure Controlled
	

Illustration examples.

Solenoid Pilot Controlled

- » Status indication switch (ready-to-run) to inform machine controller of valve condition

Pressure Controlled for 2-Hand Control Applications

- » Requires two inputs within 500 ms
- » Senses asynchronous inputs via status indicator switch
- » Asynchronous inputs result in a fault condition where pressure is applied to port 2
- » Status indication switch available to be integrated with electrical safety control system where equipped

The pressure controlled valve is a two hand pressure controlled 4-way double valve controlled by two separate pneumatic signals essentially providing “AND” gate control for the output ports. Both pilot signals must be provided within approximately 500 milliseconds of each other to actuate the valve.

Proper actuation shifts output pressure to port 4. If the valve is not actuated, not provided appropriate pneumatic signals within the discordance window or if the valve actuates abnormally, inlet pressure will only be passed to port 2-cylinder retracted.

VALVE FEATURES	
Dynamic Monitoring	Self-contained dynamic monitoring system requires no additional valve monitoring controls
Valve Reset	Automatic reset upon de-actuation
Spool Type Design	Dual stainless steel spools construction
Status Indicator Option	Status indication switch (ready-to-run) to inform machine controller of valve condition The Pressure switch provides a signal when valve is in a faulted position
Mounting	Base mounted
SISTEMA Library	Available for download

Meets Standards EN13736 and ANSI B11.2, Safety requirements for Pneumatic Cylinder Presses and other hazardous pneumatic cylinder applications.

These valves are not designed for controlling clutch/brake mechanisms on mechanical power presses.

PRODUCT CREDENTIALS				
Performance Level Per ISO 13849-1:2015	DGUV	Declaration of Conformity		Certificate of Compliance
				

Specifications

STANDARD SPECIFICATIONS					
GENERAL	Function		4-way 5/2 Valve		
	Construction Design		Double Spool and Sleeve		
	Actuation		Electrical	Solenoid Pilot Controlled	
			Pneumatic	Pressure Controlled	
	Mounting	Type	Base		
		Orientation	Any, preferably vertical		
	Connection		Threaded Ports	NPT	
G					
Minimum Operation Frequency		Once per month, to ensure proper function			
OPERATING CONDITIONS	Temperature	Ambient	40° to 120°F (4° to 50°C)		
		Media	40° to 175°F (4° to 80°C)		
	Flow Media		Filtered air		
	Operating Pressure	Solenoid Pilot Controlled	40 to 150 psig (2.5 to 10.3 bar)		
			NOTE: Main solenoids must be off when performing reset procedure		
	Pressure Controlled	40 to 100 psig (2.5 to 7 bar)			
	Pilot Pressure		Must be equal to or greater than inlet pressure but should not exceed maximum inlet pressure		
ELECTRICAL DATA FOR PRESSURE SWITCH	Maximum Current/Voltage		4A, 250 volts AC		
			50 mA, 24 volts DC		
	Pressure Switch Rating		Rated in excess of 15 million cycles; electrical life of switch varies with conditions and voltage		
ELECTRICAL DATA FOR SOLENOID PILOT CONTROLLED VALVES	Solenoids		Current Flow	Operating Voltage	Power Consumption (each solenoid)
			DC	24 volts	14 watts
			AC	110-120 volts, 50/60 Hz	5.8 watts nominal, 6.5 watts maximum
				230-240 volts, 50/60 Hz	
			Rated for continuous duty		
	Enclosure Rating		IP65, IEC 60529		
	Electrical Connection		DIN EN 175301-803		Form A
			Uses cord-grip connectors at solenoids		
CONSTRUCTION MATERIAL	Valve Body		Cast Aluminum		
	Poppet		Stainless Steel		
	Seal		Buna-N, Fluorocarbon		
SAFETY DATA	Functional Safety Data		Category	CAT 4, PL e	
			B _{10D}	20,000,000	
			PFH _D	7.71x10 ⁻⁹	
			MTTF _D	301.9 (n _{op} : 662400)	
	Vibration/Impact Resistance		Calculated to DIN EN 60068-2-6		

IMPORTANT NOTE: Please read carefully and thoroughly all of the CAUTIONS, WARNINGS on the inside back cover.

Ordering Information

5/2 SOLENOID PILOT CONTROLLED VALVES – VALVE AND BASE

MODEL NUMBER CONFIGURATOR4-Way 2-Position Valves

Y

77

7

6

A

3

4

1

0

W

Port Thread

NPT

Leave Blank

G

SAE (Straight Thread)

D

S

Series

Actuation

Solenoid Pilot

Valve Function

5/2

Revision Level

Current

Voltage*

DC

24 V

W

AC

110 V, 50 Hz

120 V, 50/60 Hz

230 V, 50/60 Hz **

Z

Y

* For other voltages consult ROSS.

** 230 V AC (OSHA regulations limit press control voltage to no more than 120 V AC in the US).

Status Indicator

None

0

Mechanical Pressure Switch
DIN EN 175301-803 Form A
(connector included)

1

Basic Size	Port Size			Base Mount	
	In	Out			
2	1/2	3/8	3	4	1
4	3/4	1/2	4	4	2
		3/4	5	4	1
	SAE12	SAE12	Leave Blank	4H	1

Model Number examples: Y7776A3410W, YD7776A4H21Z.

Valve and Base	Size			Flow C _v (NI/min)				≈ Weight lb (kg)
	Basic	Port 1	Port 2, 4	1-2	1-4	2-3	4-5	
With Status Indicator Switch	2	1/2	3/8	2.0 (2000)	1.6 (1600)	1.6 (1600)	2.8 (2800)	8.4 (3.8)
	4	3/4	1/2	3.2 (3100)	3.4 (3300)	2.7 (2700)	7.2 (7100)	11.2 (5.1)
			3/4					
Without Status Indicator Switch	2	1/2	3/8	2.0 (2000)	1.6 (1600)	1.6 (1600)	2.8 (2800)	7.6 (3.4)
	4	3/4	1/2	3.2 (3100)	3.4 (3300)	2.7 (2700)	7.2 (7100)	10.2 (4.6)
			3/4					
		SAE 12	SAE 12					

Simplified Schematic

5/2 Solenoid Pilot Controlled Valves – Valve only, Base only

Valve Only	With Status Indicator Switch	Size			Model Number #		
		Basic	Port 1	Port 2, 4	24 V DC	110-120 V AC	230 V AC
		2	1/2	3/8	Y7776A3401W	Y7776A3401Z	Y7776A3401Y
		4	3/4	1/2	Y7776A4401W	Y7776A4401Z	Y7776A4401Y
				3/4			
			SAE 12	SAE 12			
		# Valve include status indicator switch with DIN EN type connection, for status indicator switch with M12 type connection consult ROSS.					
	Without Status Indicator Switch	Size			Model Number		
		Basic	Port 1	Port 2, 4	24 V DC	110-120 V AC	230 V AC
		2	1/2	3/8	Y7776A3400W	Y7776A3400Z	Y7776A3400Y
		4	3/4	1/2	Y7776A4400W	Y7776A4400Z	Y7776A4400Y
				3/4			
			SAE 12	SAE 12			

Base Only	Basic Size	Port Sizes		Model Number	
		1	2, 4	NPT Thread	G Thread
	2	1/2	3/8	Y996C91	YD996C91
	4	3/4	1/2	Y1049C91	YD1049C91
			3/4	Y1153C91	YD1153C91
		SAE 12	SAE 12	Straight Thread	
				Y1159G1	

Solenoid & Pressure Switch Pinouts

DIN EN 175301-803 Form A	
Solenoid	1 - Positive 2 - Negative 4 - Ground
ROSS Connector	
Pressure Switch for Status Indicator	1 - Common 2 - Normally Closed 4 - Normally Open G - Ground

Valve Operation

SOLENOID PILOT CONTROLLED VALVES

Normal Operation

After installation the valve is operated by energizing both solenoid pilots (S1 and S2) simultaneously. This causes both main valve elements to be actuated so that air from inlet port 1 flows to outlet port 4. Air downstream of port 2 is exhausted through port 3.

When the solenoid pilots are de-energizing, both valve elements are de-actuated, and air then flows from inlet port 1 to outlet port 2. Air downstream of port 4 is exhausted through port 5.

Safety Function

If the two main valve elements are not actuated or de-actuated synchronously, within 500 ms, the valve defaults so that outlet port 2 receives full inlet pressure, and outlet port 4 is exhausted through port 5. If this abnormal operation is the result of a temporary circumstance, the valve will be ready to resume normal operation as soon as both pilot signal ports have been de-energized and both main valve elements have returned to their normal ready-to-run position. Applying the electrical signal to both solenoids simultaneously will resume normal operation.


If the cause of the abnormal operation is still present, the valve will either remain in the default position (pressure on port 2 and not port 4) or will again go into this position on the next actuation attempt. The source of the abnormality must be investigated and corrected before further operation.

Pressure Switch

Valves with model numbers ending in the number 1 have a pressure switch to provide user feedback when movement of the main valve elements was asynchronous.


Terminals 1 and 4 are connected when air pressure is present and the valve is "Ready-to-Run". If an abnormal operation has occurred or pressure is removed from the valve inlet, terminals 1 and 2 are connected.

Note: DC voltage pressure switches do not have a ground terminal.

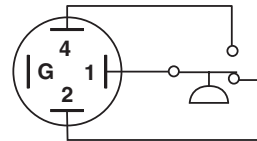

Pin 1: Common
Pin 2: Normally Closed
Pin G: Not used
Pin 4: Normally Open

Valve Schematic

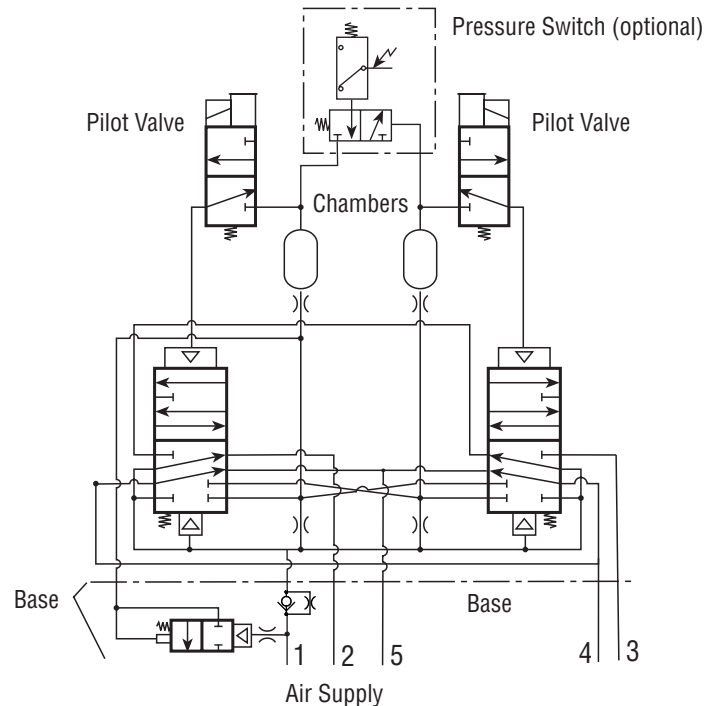


Solenoid Pilot Controlled Valves – Valve and Base Assembly with Remote Reset

DIMENSIONS


Inches (mm)

Basic Size 2

with Status Indicator Switch

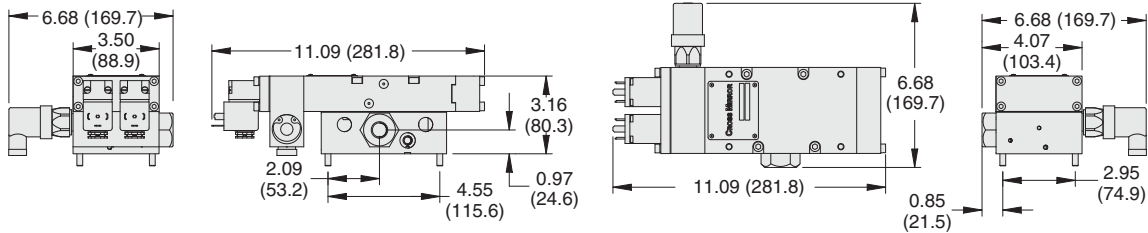


without Status Indicator Switch

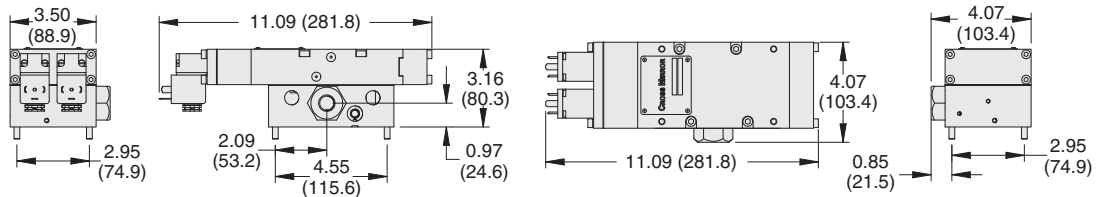


Basic Size 4


with Status Indicator Switch

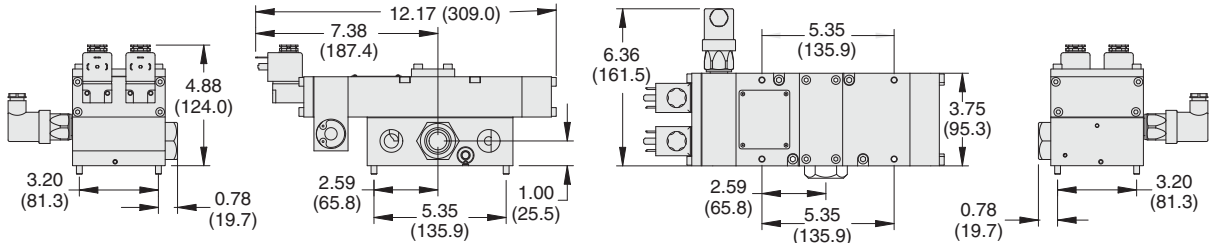

without Status Indicator Switch

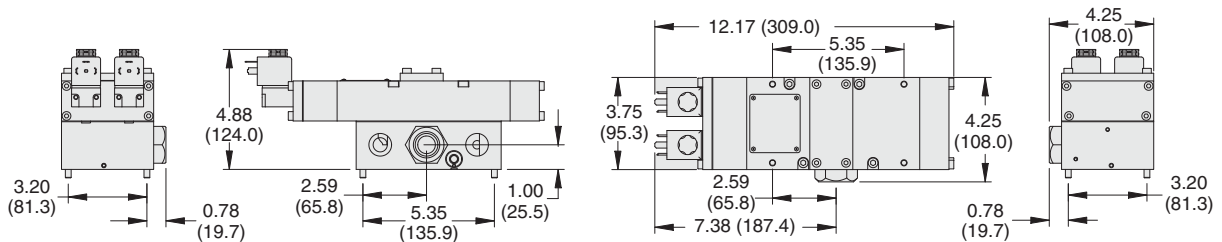

Downloadable CAD models available.

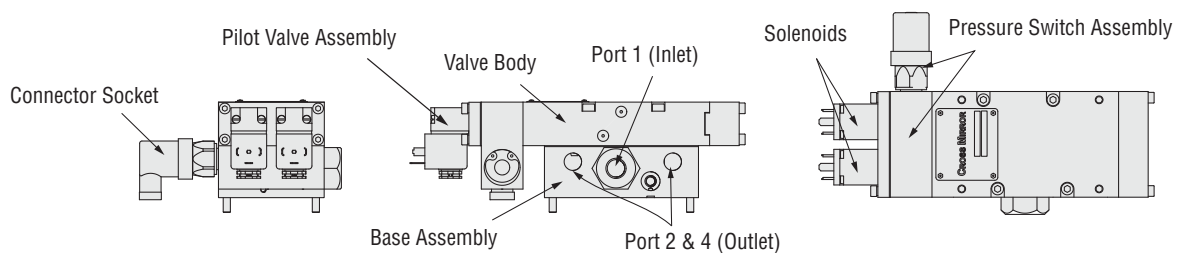

Ordering Information

5/2 PRESSURE CONTROLLED VALVES – VALVE AND BASE

MODEL NUMBER CONFIGURATOR4-Way 2-Position Valves

Y

77

8

6

A

3

4

1

0

W

Port Thread

NPT

Leave Blank

G

SAE (Straight Thread)

D

S

Series

Actuation

Pressure Controlled

Valve Function

5/2

Revision Level

Current

Voltage*

When None selected for Status Indicator

Leave Blank

DC

24 V

W

AC

110 V, 50 Hz

120 V, 50/60 Hz

230 V, 50/60 Hz **

Z

Y

* For other voltages consult ROSS.

** 230 V AC (OSHA regulations limit press control voltage to no more than 120 V AC in the US).

Status Indicator

None

0

Mechanical Pressure Switch
DIN EN 175301-803 Form A
(connector included)

1

Basic Size

Port Size

In

Out

Base Mount

2

1/2

3/8

3

4

1

4

3/4

1/2

3/4

4

5

4

1

SAE12

SAE12

Leave Blank

4H

1

Model Number examples: Y7778A3410W, YD7778A4H21Z.

Valve and Base

Size

Flow
C_v (NI/min)

≈ Weight
lb (kg)

Basic

Port 1

Port 2, 4

1-2

1-4

2-3

4-5

2

1/2

3/8

2.0 (2000)

1.6 (1600)

1.6 (1600)

2.8 (2800)

8.4 (3.8)

4

3/4

1/2

3/4

3.2 (3100)

3.4 (3300)

2.7 (2700)

7.2 (7100)

11.2 (5.1)

SAE 12

SAE 12

Without Status Indicator Switch

2

1/2

3/8

2.0 (2000)

1.6 (1600)

1.6 (1600)

2.8 (2800)

7.6 (3.4)

4

3/4

1/2

3/4

3.2 (3100)

3.4 (3300)

2.7 (2700)

7.2 (7100)

10.2 (4.6)

SAE 12

SAE 12

Simplified Schematics

5/2 Pressure Controlled Valves – Valve only, Base only


Valve Only	With Status Indicator Switch	Size			Model Number #		
		Basic	In	Out	24 V DC	110-120 V AC	230 V AC
		2	1/2	3/8	Y7786A3401W	Y7786A3401Z	Y7786A3401Y
		4	3/4	1/2	Y7786A4401W	Y7786A4401Z	Y7786A4401Y
				3/4	Y7786A5401W	Y7786A5401Z	Y7786A5401Y
			SAE 12	SAE 12	Y7786A4401W	Y7786A4401Z	Y7786A4401Y
	# Valve include status indicator switch with DIN EN type connection, for status indicator switch with M12 type connection consult ROSS.						
Without Status Indicator Switch	Size			Model Number			
	Basic	In	Out				
	2	1/2	3/8	Y7786A3400			
	4	3/4	1/2	Y7786A4400			
			3/4				
		SAE 12	SAE 12				

Base Only	Size			Model Number	
	Basic	In	Out	NPT Thread	G Thread
	2	1/2	3/8	Y996C91	YD996C91
	4	3/4	1/2	Y1049C91	YD1049C91
			3/4	Y1153C91	YD1153C91
		SAE 12	SAE 12	Straight Thread	
				Y1159G1	

Pressure Switch Pinout

ROSS Connector	
Pressure Switch for Status Indicator	
	1 - Common 2 - Normally Closed 4 - Normally Open G - Ground

Typical 2-Hand-Anti-Tie-Down Application

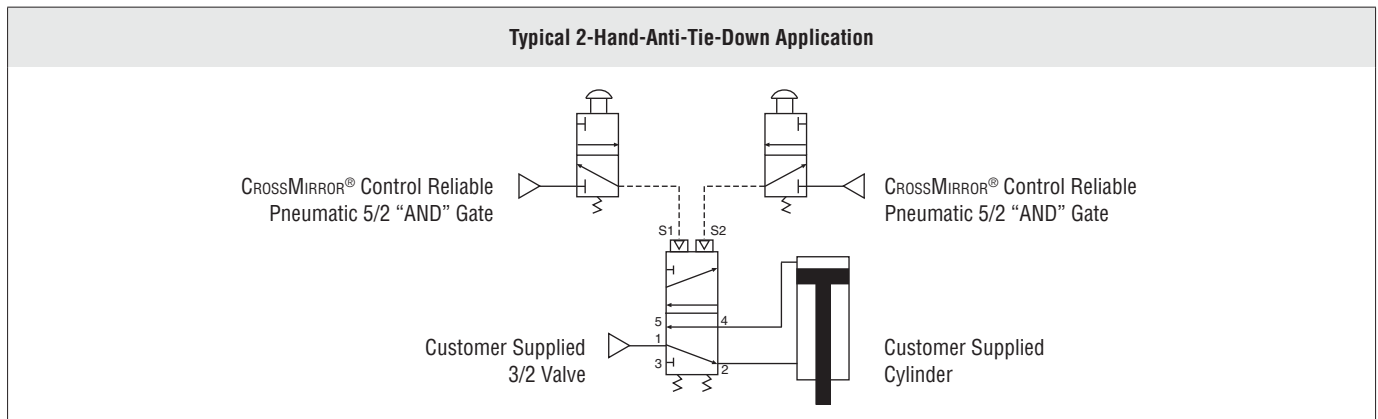

Valve Operation

PRESSURE CONTROLLED VALVES

Normal Operation

After installation the valve is operated by pressurizing both pilot supply ports (S1 and S2) simultaneously. This causes both main valve elements to be actuated so that air from inlet port 1 flows to outlet port 4. Air downstream of port 2 is exhausted through port 3.

When the pilot supply ports are de-pressurized, both valve elements are de-actuated, and air then flows from inlet port 1 to outlet port 2. Air downstream of port 4 is exhausted through port 5.

Safety Function

If the two main valve elements are not actuated or de-actuated synchronously, within 500 ms, the valve defaults so that outlet port 2 receives full inlet pressure, and outlet port 4 is exhausted through port 5. If this abnormal operation is the result of a temporary circumstance, the valve will be ready to resume normal operation as soon as both pilot signal ports have been de-pressurized and both main valve elements have returned to their normal ready-to-run position. Applying pressure to both signal ports simultaneously will resume normal operation.


If the cause of the abnormal operation is still present, the valve will either remain in the default position (pressure on port 2 and not port 4) or will again go into this position on the next actuation attempt. The source of the abnormality must be investigated and corrected before further operation.

Pressure Switch

Valves with model numbers ending in the number 1 have a pressure switch to provide user feedback when movement of the main valve elements was asynchronous.


Terminals 1 and 4 are connected when air pressure is present and the valve is “Ready-to-Run”. If an abnormal operation has occurred or pressure is removed from the valve inlet, terminals 1 and 2 are connected.

Note: DC voltage pressure switches do not have a ground terminal.

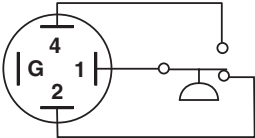

- Pin 1:** Common
- Pin 2:** Normally Closed
- Pin G:** Not used
- Pin 4:** Normally Open

Valve Schematic

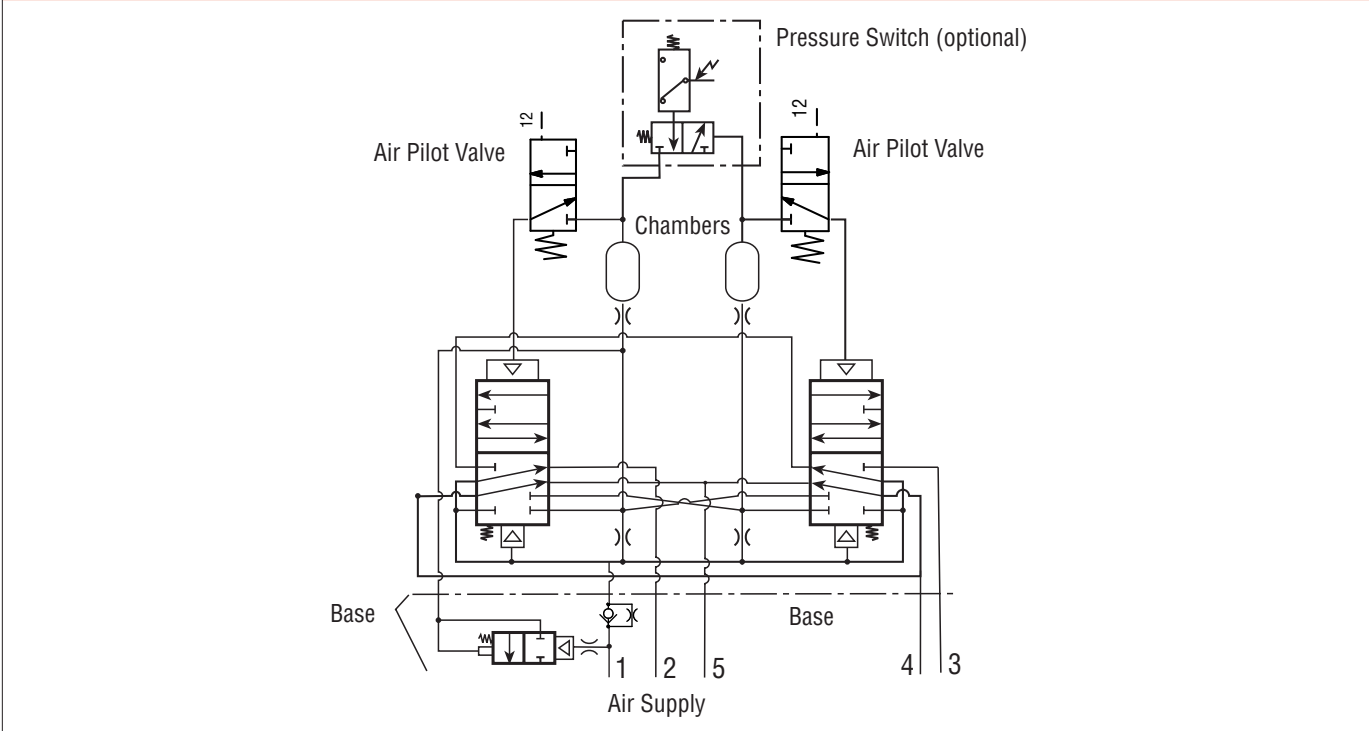


Pressure Controlled Valves – Valve and Base Assembly with Remote Reset

DIMENSIONS


Inches (mm)

Basic Size 2

with Status Indicator Switch

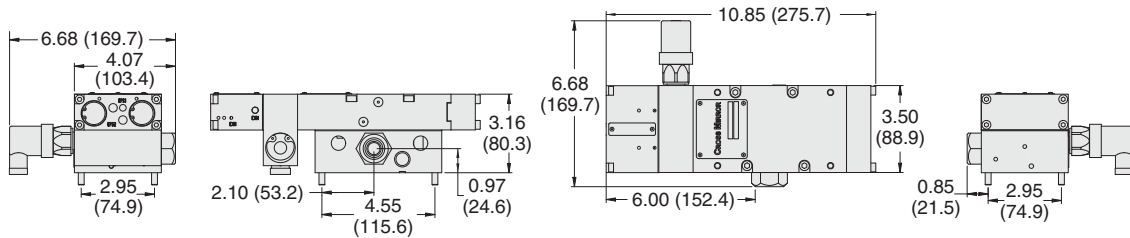


without Status Indicator Switch

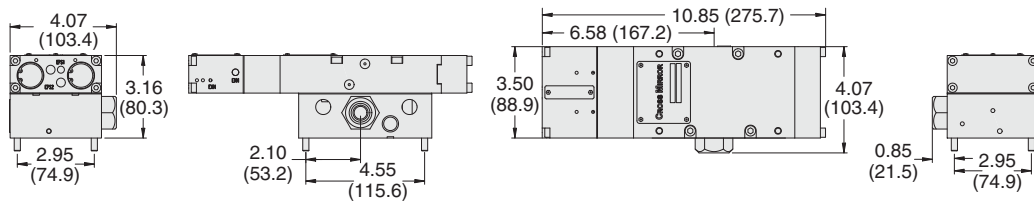


Basic Size 4


with Status Indicator Switch

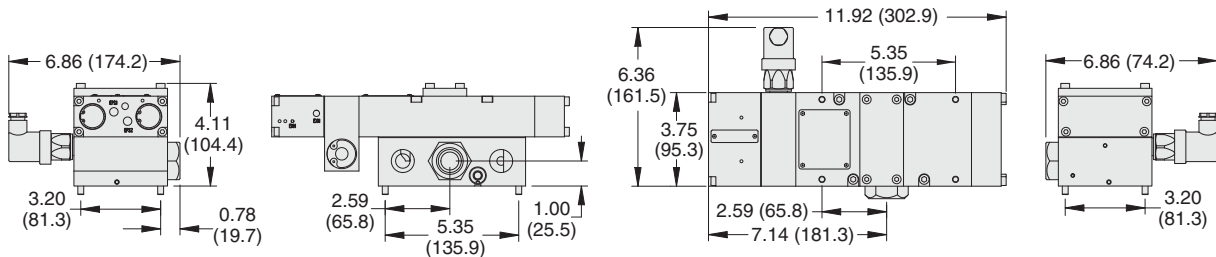


without Status Indicator Switch

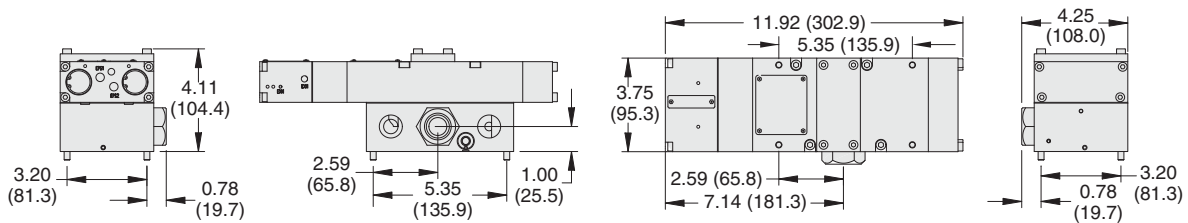

Downloadable CAD models available.

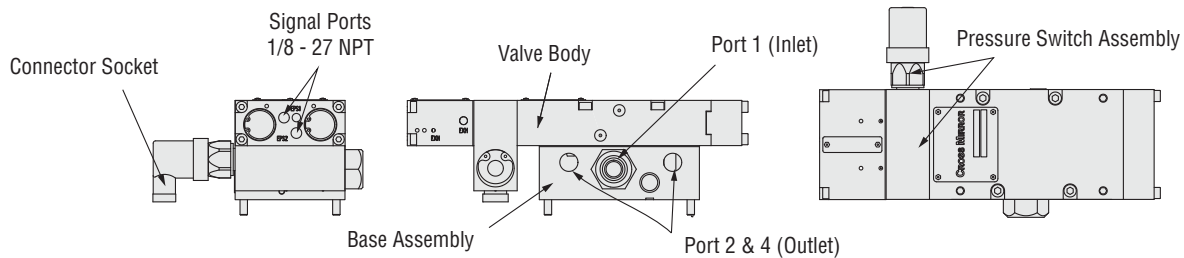

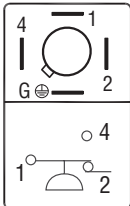ELECTRICAL STATUS INDICATION							
Pressure Switches for Status Indicator	Installation Location	Indicator Type	Voltage Type	Connector Type	Model Number	Port Thread	Factory Preset psi (bar)
	Pressure Sensing Port	Mechanical Pressure Switch	DC	ROSS Connector	798E30	1/8 NPT	22 (1.5) falling
			AC	ROSS Connector	518E30		
Connector Pinout							
ROSS Connector							
 1 - Common 2 - Normally Closed 4 - Normally Open G - Ground							

PREWIRED ELECTRICAL CONNECTORS



Illustration example.

Prewired Connector Kits	Cable					Kit Number			
	End 1	End 2	Connection	Quantity Included	Length meters (feet)	Without Light	Lighted Connector		
	Connector	Cord					24 V DC	120 V AC	230 V AC
	DIN EN 175301-803 Form A	Flying leads	Solenoid	2	5 (16.4)	2243H77	2268H77-W	2268H77-Z	2268H77-Y
					10 (32.8)	2244H77	2269H77-W	2269H77-Z	2269H77-Y

Pre-wired Connectors	Cable		Connection	Quantity Included	Length meters (feet)	Cable Diameter	Kit Number			
	End 1	End 2					Without Light	Lighted Connector		
	Connector	Cord						24 V DC	120 V AC	230 V AC
	DIN EN 175301-803 Form A	Flying leads	Solenoid	1	2 (6.5)	6-mm	721K77	720K77-W	720K77-Z	720K77-Y
						10-mm	371K77	383K77-W	383K77-Z	383K77-Y

ELECTRICAL CONNECTORS

Cable Grip	
Without Light	With Light

Illustration examples.

Connectors	Connector					Model Number			
	Type	Connection	Fitting Connection	Quantity Included	Cord Diameter mm	Without Light	Lighted Connector		
	DIN EN 175301-803 Form A	Solenoid	Cable grip	1	8 to 10		936K87-W	936K87-Z	936K87-Y
			1/2" NPT conduit	1	—	723K77	724K77-W	724K77-Z	724K77-Y
	ROSS Connector	Status Indicator	Cable grip	1	8 to 10	522E30	—	—	—

Connector Pinouts	
Solenoid	Status Indicator
DIN EN 175301-803 1 - Black 2 - Black 4 - Green/Yellow (Ground)	ROSS Connector 1 - Common 2 - Normally Closed 4 - Normally Open G - Ground

EXHAUST SILENCERS


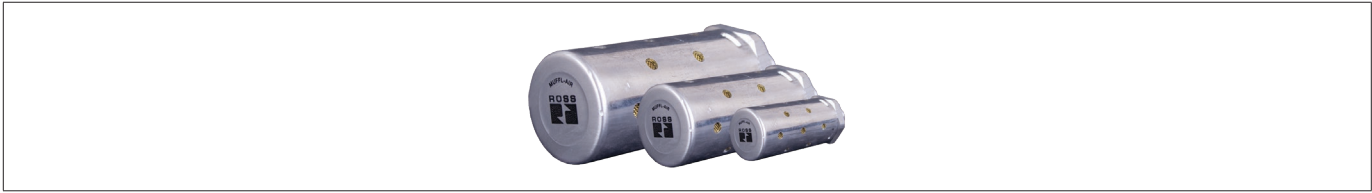


Illustration example.

Silencers	SPECIFICATIONS		Silencer Material		Pressure Range psig (bar)		Schematic	
			Aluminum		0-290 (0-20) maximum			
	Port Size	Thread Type	Flow C _v (NI/min)	Model Number		Dimensions inches (mm)		≈ Weight lb (kg)
				NPT Thread	R/Rp Thread	Length	Hex Size (D)	
	3/8	Male	4.9 (4800)	5500A3003	D5500A3003	3.5 (9)	1.25 (32)	0.2 (0.1)
	1/2	Male	6.8 (6700)	5500A4003	D5500A4003	3.6 (9)	1.25 (32)	
	3/4	Male	7.2 (7100)	5500A5003	D5500A5003	5.3 (14)	2.0 (51)	



CAUTIONS, WARNINGS And STANDARD WARRANTY

ROSS OPERATING VALVE, ROSS CONTROLS®, ROSS DECCO®, AUTOMATIC VALVE INDUSTRIAL, and MASTER PNEUMATIC, collectively the "ROSS Global Family".

PRE-INSTALLATION or SERVICE

1. Before servicing a valve or other pneumatic component, be sure all sources of energy are turned off, the entire pneumatic system is shut down and exhausted, and all power sources are locked out (ref: OSHA 1910.147, EN 1037).
2. All ROSS Global Family Products, including service kits and parts, should be installed and/or serviced only by persons having training and experience with pneumatic equipment. Because any product can be tampered with and/or need servicing after installation, persons responsible for the safety of others or the care of equipment must check ROSS Global Family Products on a regular basis and perform all necessary maintenance to ensure safe operating conditions.
3. All applicable instructions should be read and complied with before using any fluid power system to prevent harm to persons or equipment. In addition, overhauled or serviced valves must be functionally tested prior to installation and use. If you have any questions, call your nearest ROSS Global Family location.
4. Each ROSS Global Family Product should be used within its specification limits. In addition, use only ROSS ROSS Global Family components to repair ROSS Global Family Products.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

FILTRATION and LUBRICATION

1. Dirt, scale, moisture, etc., are present in virtually every air system. Although some valves are more tolerant of these contaminants than others, best performance will be realized if a filter is installed to clean the air supply, thus preventing contaminants from interfering with the proper performance of the equipment. The ROSS Global Family recommends a filter with a 5-micron rating for normal applications.
2. All standard ROSS Global Family filters and lubricators with polycarbonate plastic bowls are designed for compressed air applications only. Use the metal bowl guard, where provided, to minimize danger from high pressure fragmentation in the event of bowl failure. Do not expose these products to certain fluids, such as alcohol or liquefied petroleum gas, as they can cause bowls to rupture, creating a combustible condition and hazardous leakage. Immediately replace crazed, cracked, or deteriorated bowls.
3. Only use lubricants which are compatible with materials used in the valves and other components in the system. Normally, compatible lubricants are petroleum base oils with oxidation inhibitors, an aniline point between 180°F (82°C) and

220°F (104°C), and an ISO 32, or lighter, viscosity. Avoid oils with phosphate type additives which can harm polyurethane components, potentially leading to valve failure which risks personal injury, and/or damage to property.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

AVOID INTAKE/EXHAUST RESTRICTION

1. Do not restrict air flow in the supply line. To do so could reduce the pressure of the supply air below minimum requirements for the valve and thereby causing erratic action.
2. Do not restrict a valve's exhaust port as this can adversely affect its operation. Exhaust silencers must be resistant to clogging and must have flow capacities at least as great as the exhaust capacities of the valves. Contamination of the silencer can result in reduced flow and increased back pressure.

WARNINGS:

Failure to follow these instructions can result in personal injury and/or property damage.

SAFETY APPLICATIONS

1. Mechanical Power Presses and other potentially hazardous machinery using a pneumatically controlled clutch and brake mechanism must use a press control double valve with a monitoring device. A double valve without a self-contained monitoring device should be used only in conjunction with a control system which assures monitoring of the valve. All double valve installations involving hazardous applications should incorporate a monitoring system which inhibits further operation of the valve and machine in the event of a failure within the valve mechanism.
2. Safe Exhaust (dump) valves without a self-contained monitoring device should be used only in conjunction with a control system which assures monitoring of the valve. All Safe Exhaust valve installations should incorporate a monitoring system which inhibits further operation of the valve and machine in the event of a failure within the valve mechanism.
3. Per specifications and regulations, the ROSS L-O-X® and L-O-X® with EEZ-ON®, N06 and N16 Series operation products are defined as energy isolation devices, NOT AS EMERGENCY STOP DEVICES.

WARNINGS: Failure to follow these instructions can result in personal injury and/or property damage.

STANDARD WARRANTY

All products sold by the ROSS Global Family are warranted for a one-year period [with the exception of Air Preparation products which are warranted for a period of seven (7) years] from the date of purchase. All products are, during their respective warranty periods, warranted to be free of defects in material and workmanship. The ROSS Global Family's obligation under this warranty is limited to repair, replacement or refund of the purchase price paid for products which the ROSS Global Family has determined, in its sole discretion, are defective. All warranties become void if a product has been subject to misuse, misapplication, improper maintenance, modification or tampering. Products for which warranty protection is sought must be returned to the ROSS Global Family freight prepaid.

THE WARRANTY EXPRESSED ABOVE IS IN LIEU OF AND EXCLUSIVE OF ALL OTHER WARRANTIES AND THE ROSS GLOBAL FAMILY EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE ROSS GLOBAL FAMILY MAKES NO WARRANTY WITH RESPECT TO ITS PRODUCTS MEETING THE PROVISIONS OF ANY GOVERNMENTAL OCCUPATIONAL SAFETY AND/OR HEALTH LAWS OR REGULATIONS. IN NO EVENT IS THE ROSS GLOBAL FAMILY LIABLE TO PURCHASER, USER, THEIR EMPLOYEES OR OTHERS FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WHICH MAY RESULT FROM A BREACH OF THE WARRANTY DESCRIBED ABOVE OR THE USE OR MISUSE OF THE PRODUCTS. NO STATEMENT OF ANY REPRESENTATIVE OR EMPLOYEE OF THE ROSS GLOBAL FAMILY MAY EXTEND THE LIABILITY OF THE ROSS GLOBAL FAMILY AS SET FORTH HEREIN.



GLOBAL LOCATIONS

	AMERICAS	USA	ROSS CONTROLS	Tel: +1-248-764-1800	www.rosscontrols.com
		Canada	ROSS CANADA	Tel: +1-416-251-7677	www.rosscanada.com
		Brazil	ROSS BRASIL	Tel: +55-11-4335-2200	www.rosscontrols.com.br
	EUROPE	Germany	ROSS EUROPA	Tel: +49 (0)6103-7597-100	www.rosseuropa.com
		France	ROSS FRANCE	Tel: +33(0)1-49-45-65-65	www.rossfrance.com
		United Kingdom	ROSS UK	Tel: +44 (0)1254 872277	www.rossuk.co.uk
	ASIA & PACIFIC	India	ROSS CONTROLS INDIA	Tel: +91-44-2624-9040	www.rosscontrolsindia.com
		China	ROSS CONTROLS CHINA	Tel: +86-21-6915-7961	www.rosscontrolschina.com
		Japan	ROSS ASIA	Tel: +81-42-778-7251	www.rossasia.co.jp



www.automaticvalve.com



www.rossdecco.com



www.manufactis.net



www.masterpneumatic.com



www.pneumatrol.com



www.ubsafe.com